

**HEAT&GLO™**


No one builds a better fire

Please consult the manufacturer's installation manual for all details and requirements before making a final design layout decision.


## Escape See-Through

Direct Vent Gas Fireplace


MODEL	FRONT WIDTH		BACK WIDTH		HEIGHT		DEPTH		VIEWING AREA
	Actual	Framing	Actual	Framing	Actual	Framing	Actual	Framing	
ESC-42ST	60	60-1/4	60	60-1/4	46-3/8	46-1/2	30	30	39-7/16 x 35-1/8

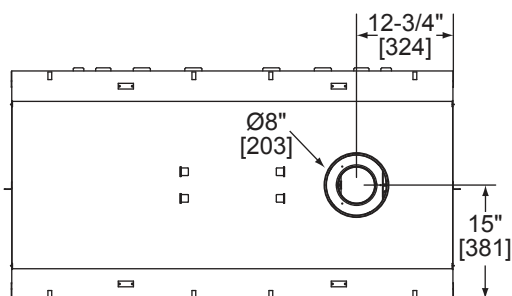


Top View

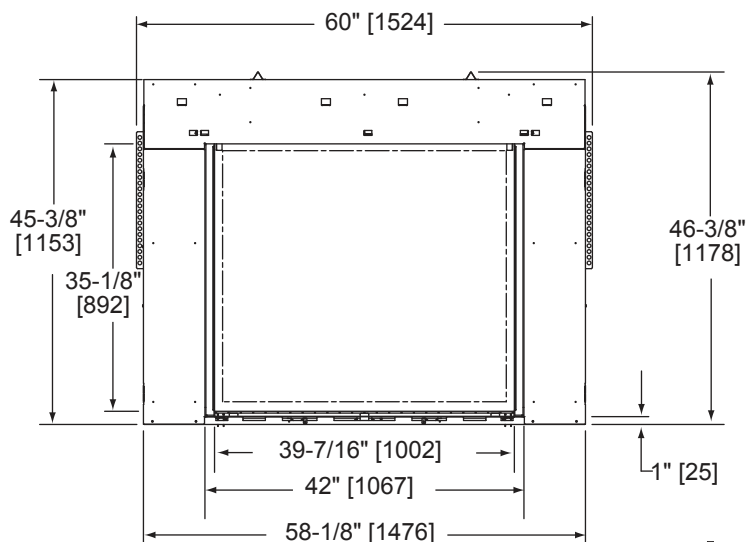

Front View

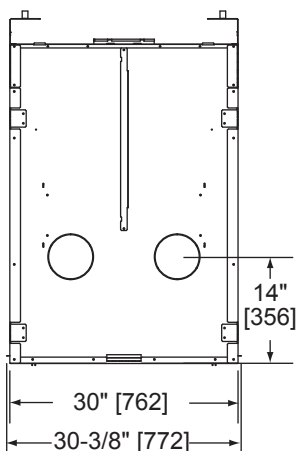

Left Side View

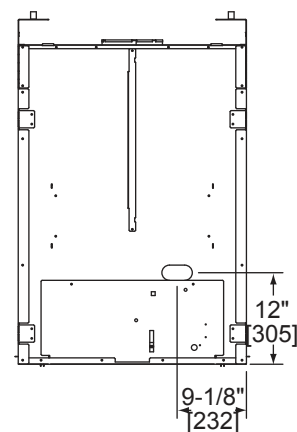


Right Side View


## MINIMUM FIREPLACE CLEARANCES

AREA	TO COMBUSTIBLES (in inches)
CLEARANCE TO CEILING	43 from opening
COMBUSTIBLE FLOOR/FLOORING	0/See Diagram
SIDES OF APPLIANCE	1
FRONT OF APPLIANCE	36


## FIREPLACE LOCATIONS

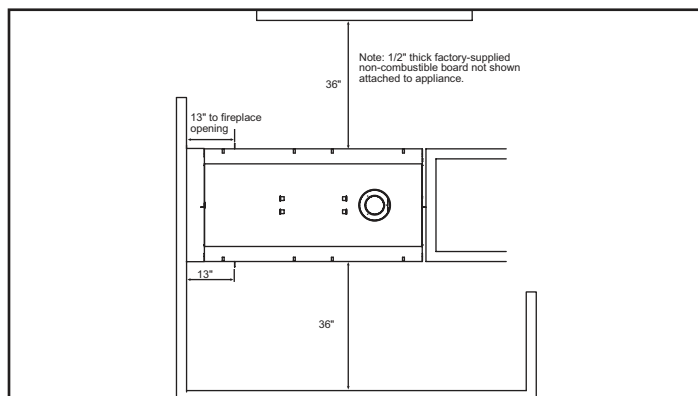


## WALL PENETRATION

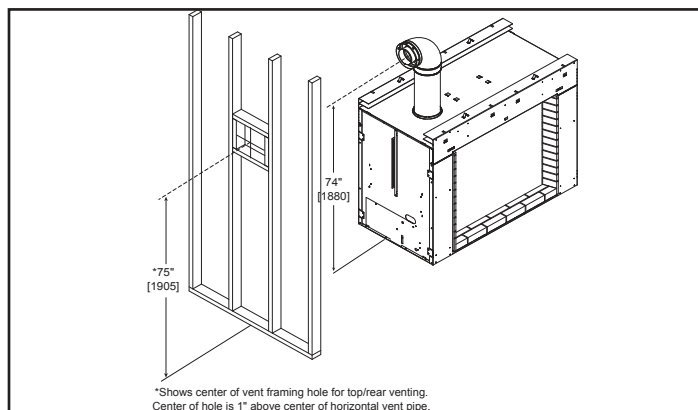


## MANTEL LEG/WALL PROJECTIONS

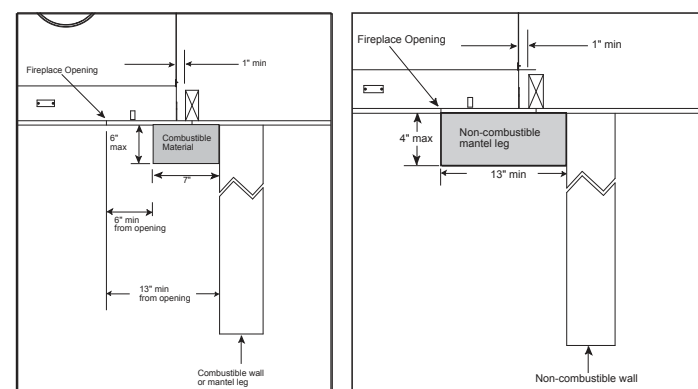


## FRAMING DIMENSIONS

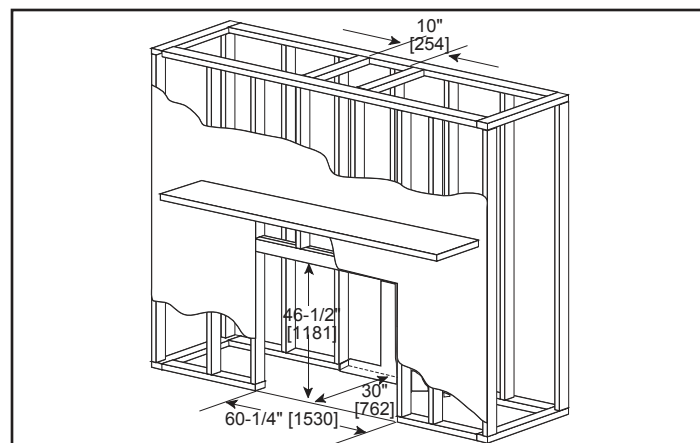

## CLEARANCES TO COMBUSTIBLES

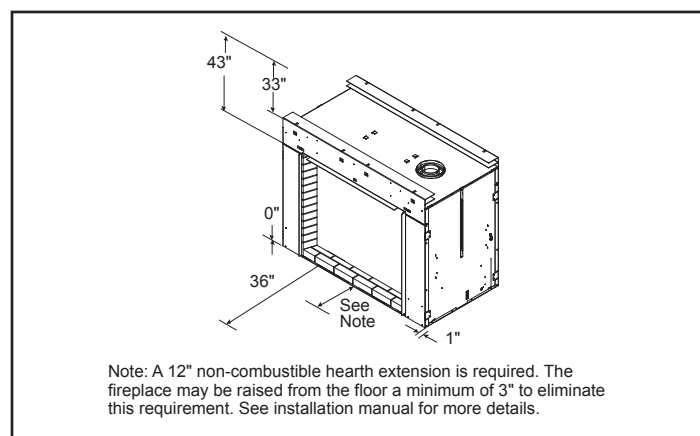

## MANTEL PROJECTIONS

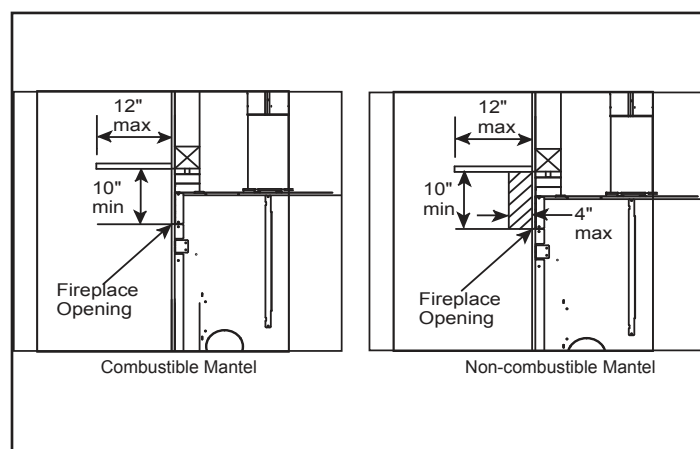

### PRODUCT LISTING CODES

US	ANSI Z21.88a-2007
CAN	CSA 2.33a-2007
US LISTED	UL307B

Product information provided is not complete and is subject to change without notice. Product installation must adhere strictly to instructions accompanying product to avoid risk of fire and potential injury.

Additional information can be found online at [www.heatnglo.com](http://www.heatnglo.com)