# **Installation Manual**

# **Installation & Appliance Set-Up**

INSTALLER: Leave this manual with party responsible for use and operation.

OWNER: Retain this manual for future reference.

NOTICE: DO NOT DISCARD THIS MANUAL




MT. VERNON E2 INSERT PELLET STOVE

Model(s):

MTVI-E2-MBK MTVI-E2-CSB

MTVI-E2-PMH

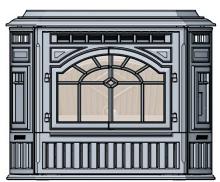





Please read this entire manual before installation and use of this pellet fuel-burning room heater. Failure to follow these instructions could result in property damage, bodily injury or even death.

#### **CAUTION**

Tested and approved for wood pellets and shelled corn only. Burning of any other type of fuel voids your warranty.

#### NOTE

A 2:1 mix of pellets to corn is approved, but may require the firepot to be cleaned more frequently.

#### NOTE

To obtain a French translation of this manual, please contact your dealer or visit www.quadrafire.com

Pour obtenir une traduction française de ce manuel, s'il vous plaît contacter votre revendeur ou visitez www.quadrafire.com

# A

#### **WARNING**



If the information in these instructions is not followed exactly, a fire could result causing property damage, personal injury, or death.

- Do not store or use gasoline or other flammable vapors and liquids in the vicinity of this or any other appliance.
- Do not overfire If heater or chimney connector glows, you are overfiring. Overfiring will void your warranty.
- Comply with all minimum clearances to combustibles as specified. Failure to comply may cause house fire.



#### **WARNING**



#### HOT SURFACES!

Glass and other surfaces are hot during operation AND cool down.

#### Hot glass will cause burns.

- Do not touch glass until it is cooled
- NEVER allow children to touch glass
- Keep children away
- CAREFULLY SUPERVISE children in same room as fireplace.
- Alert children and adults to hazards of high temperatures
- High temperatures may ignite clothing or other flammable materials.
- Keep clothing, furniture, draperies and other flammable materials away.

#### **CAUTION**

Check building codes prior to installation.

- Installation MUST comply with local, regional, state and national codes and regulations.
- Consult local building, fire officials or authorities having jurisdiction about restrictions, installation inspection, and permits.

#### MT VERNON E2 INSERT



#### **Safety Alert Key:**

- DANGER! Indicates a hazardous situation which, if not avoided will result in death or serious injury.
- WARNING! Indicates a hazardous situation which, if not avoided could result in death or serious injury.
- CAUTION! Indicates a hazardous situation which, if not avoided, could result in minor or moderate injury.
- NOTICE: Indicates practices which may cause damage to the appliance or to property.

#### **TABLE OF CONTENTS**

1	Important Safety Information	3
•	A. Appliance Certification	
	B. BTU & Efficiency Specifications	
	C. Glass Specifications	
	D. Electrical Rating	3
	E. Mobile Home Approved	3
	F. Non-Combustible Materials	
	G. Combustible Materials	3
2	Getting Started	4
_	A. Design, Installation & Location Considerations	
	B. Tools And Supplies Needed	
	C. Inspect Appliance and Components	5
	D. Install Checklist	6
3	Dimensions and Clearances	7
·	A. Appliance Dimensions	
	B. Clearance To Combustibles, US & Canada	
	C. Masonry & Zero Clearance Fireplaces	
	D. Floor Protection	
	E. Minimum Opening for Masonry & Zero Clearance	
	Fireplaces	9
	F. Installation into a Factory-Built Fireplace	10
	G. Installation into a Masonry Fireplace	
	H. Prefabricated Metal Chimney	11

4 Vent Information	12
A. Venting Termination Minimum Requirements	
B. Avoiding Smoke and Odors	
C. Negative Pressure	
D. Draft	
E. Chimney and Exhaust Connection	
F. Equivalent Feet of Pipe	
G. Pipe Selection Chart	
5 Venting Systems	
A. Full Reline With Outside Air - Horizontal	
B. Full Reline With Outside Air - Vertical	
6 Appliance Set-Up	18
A. Leveling System	18
B. Outside Air Kit Instructions	18
C. Hearth Support	18
D. Removal of Cast Sides	19
E. Surround and Trim Set - Cast	19
F. Surround & Trim Set, Basic	20
G. Optional Log Set Placement Instructions	20
H. Programmable Wall Thermostat Installation	21
I. Power Cord	22
J. Trim Adjustment	
7 Mobile Home Installation	24
O Accessory List	

Quadra-Fire is a registered trademark of Hearth & Home Technologies.

1

## **Important Safety Information**

#### A. Appliance Certification

Model	Mt. Vernon Insert Pellet Stove E2		
Laboratory	OMNI Test Laboratories, Inc.		
Report No.	061-S-84-2		
Туре	Solid Fuel Room Heater, Pellet and		
	Shelled Corn Fuel Burning Type		
Standard	ASTM E1509-12, ULC-S628-93 and (UM) 84-HUD, Mobile Home Approved.		
FCC	Complies with Part 15 of FCC Rules. Operation is subject to the following two conditions: (1) this device may not cause harmful interference, and (2) this device must accept any interference received, including interference that may cause undesired operation.		

The Quadra-Fire Mt. Vernon E2 Pellet Insert meets the U.S. Environmental Protection Agency's emission limits for pellet inserts sold after May 15, 2015.

This pellet insert needs periodic inspection and repair for proper operation. It is against federal regulations to operate this pellet insert in a manner inconsistent with operating instructions in this manual.

**NOTICE:** This installation must conform with local codes. In the absence of local codes you must comply with the **ASTM E1509-12**, **ULC S628-93**, **(UM) 84-HUD and ULC/ORD-C-1482**.

#### **B. BTU & Efficiency Specifications**

EPA Certification #:	984-15
EPA Certified Emissions:	0.5 grams per hour
*LHV Tested Efficiency:	81.6 %
**HHV Tested Efficiency:	75.5* %
***EPA BTU Output:	13,900 to 42,200 / hr.
****BTU Input:	18,100 to 55,000 / hr.
Vent Size:	3 or 4 inches, "L" or "PL"
Hopper Capacity:	52 lbs.
Fuel	Wood Pellets

\* Weighted average LHV efficiency using data collected during EPA emissions test.

\*\*Weighted average HHV efficiency using data collected during EPA emissions test.

\*\*\*A range of BTU outputs based on EPA Default Efficiency and the burn rates from the low and high EPA tests.

\*\*\*\*Based on the maximum feed rate per hour multiplied by approximately 8600 BTU's which is the average BTU's from a pound of pellets.

#### C. Glass Specifications

This stove is equipped with 5mm ceramic glass. Replace glass only with 5mm ceramic glass. Please contact your dealer for replacement glass.

#### D. Electrical Rating

115 VAC, 60 Hz, Start 2.9 Amps, Run 2.45 Amps

#### E. Mobile Home Approved

- This appliance is approved for mobile home installations when not installed in a sleeping room and when an outside combustion air inlet is provided.
- The structural integrity of the mobile home floor, ceiling, and walls must be maintained.
- The appliance must be properly grounded to the frame of the mobile home and use only Listed pellet vent Class "L" or "PL" connector pipe.
- Outside Air Kit (OAK-3) must be installed in a mobile home installation.

#### F. Non-Combustible Materials

Material which will not ignite and burn, composed of any combination of the following:

Steel - Plaster
Brick - Iron
Concrete - Tile
Glass - Slate

Materials reported as passing ASTM E 136, Standard Test Method for Behavior of Metals, in a Vertical Tube Furnace of 750° C.

#### G. Combustible Materials

Material made of/or surfaced with any of the following materials:

- Wood - Compressed Paper

- Plant Fibers - Plastic

- Plywood/OSB - Sheet Rock (drywall)

Any material that can ignite and burn: flame proofed or not, plastered or un-plastered.



#### **WARNING**



#### Fire Risk.

Hearth & Home Technologies disclaims any responsibility for, and the warranty will be voided by, the following actions:

- · Installation and use of any damaged appliance.
- · Modification of the appliance.
- Installation other than as instructed by Hearth & Home Technologies.
- Installation and/or use of any component part not approved by Hearth & Home Technologies.
- Operating appliance without fully assembling all components.
- Operating appliance without legs attached (if supplied with unit).
- Do NOT Overfire If appliance or chimney connector glows, you are overfiring.

Any such action that may cause a fire hazard.

Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.

For assistance or additional information, consult a qualified installer, service agency or your dealer.

NOTE: Hearth & Home Technologies, manufacturer of this appliance, reserves the right to alter its products, their specifications and/or price without notice.

# **Install Guide**

# 2

## **Getting Started**

# A. Design, Installation & Location Considerations 1. <u>Appliance Location</u>

**NOTICE:** Check building codes prior to installation.

- Installation MUST comply with local, regional, state and national codes and regulations.
- Consult insurance carrier, local building inspector, fire officials or authorities having jurisdiction over restrictions, installation inspection and permits.

It is a good idea to plan your installation on paper, using exact measurements for clearances and floor protection, before actually beginning the installation. Location of the appliance and chimney will affect performance.

Consideration must be given to:

- Safety, convenience, traffic flow
- Placement of the chimney and chimney connector and to minimize the use of chimney offsets.
- Place the appliance where there will be a clear passage for a Listed chimney through the ceiling and roof (vertical) or through exterior wall (horizontal).
- Installing the required outside air kit will affect the location of the vent termination.

When locating vent and venting termination, the ideal location is to vent above roof line when possible. This minimizes the affects of wind loading.

Since pellet exhaust can contain ash, soot or sparks, you must consider the location of:

- Windows
- Air Intakes
- Air Conditioner
- Overhang, soffits, porch roofs, adjacent walls
- Landscaping, vegetation
- · Horizontal or vertical vent termination

#### 2. Floor Support

The supporting floor under the appliance must be able to handle the weight of the appliance, fuel load and the weight of the chimney.

Ensure that your floor will support these weights prior to installation. Add sufficient additional support to meet this weight requirement prior to installation. The weight of the appliance is 510 lbs. with a full load of fuel the max weight is 557 lbs.

## $\mathbf{\Lambda}$

#### WARNING

**Risk of Fire!** Damaged parts could impair safe operation. Do NOT install damaged, incomplete or substitute components.

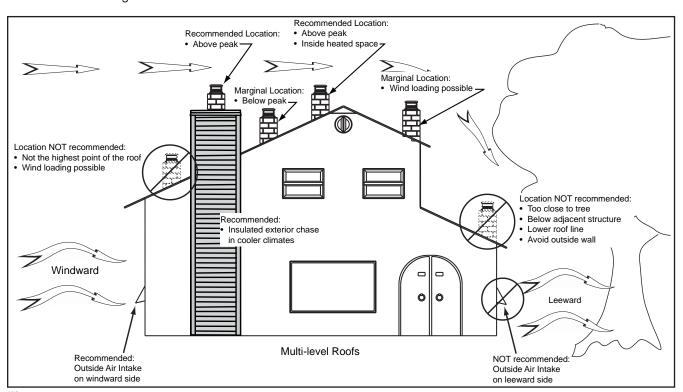


Figure 4.1

#### **B. Tools And Supplies Needed**

Tools and building supplies normally required for installation, unless installing into an existing masonry fireplace:

Reciprocating Saw
Hammer
Tape Measure
1/4" Self-Tapping Screws
Hi-temp Caulking Material
Safety Glasses
Electric Drill & Bits (1/4")

Channel Locks
Phillips Screwdriver
Plumb Line
Framing Material
Gloves
Framing Square
Level

May also need:

Vent Support Straps Venting Paint

#### C. Inspect Appliance and Components

- Open the appliance and remove all the parts and articles packed inside the Component Pack. Inspect all the parts and glass for shipping damage.
- Report to your dealer any parts damaged in shipment.
- All labels have been removed from the glass door.
- Plated surfaces have been wiped clean with a soft cloth, if applicable.
- Read all the instructions before starting the installation.
   Follow these instructions carefully during the installation to ensure maximum safety and benefit.
- Follow pipe manufacturer instructions for installation and air clearance requirements.



#### **WARNING**



#### Risk of Fire!

Damaged parts could impair safe operation.

Do NOT install damaged, incomplete or substitute components.



#### **WARNING**



Hearth & Home Technologies disclaims any responsibility for, and the warranty will be voided by, the following actions:

- Installation and use of any damaged appliance.
- · Modification of the appliance.
- Installation other than as instructed by Hearth & Home Technologies.
- Installation and/or use of any component part not approved by Hearth & Home Technologies.
- · Operating appliance without fully assembling all components.
- Do NOT Overfire

Or any such action that may cause a fire hazard.

**NOTE:** Upon removing the appliance from the fireplace a tag shall be permanently attached to the fireplace indicating it has been altered and should be inspected by a qualified person prior to re-use as a convectional fireplace (tag included in component pack).

#### D. Install Checklist

	Follow th	his Standard Work Checklis	it .		
his standard work checklis	t is to be used by the installer	in conjunction with, not instead of, th	ne instructio	ons contained in this i	nstallation manual.
ustomer:					
ate Installed:					
ot/Address:					
ocation of Fireplace					
nstaller: ealer/ Distributor Pl	nono #:				
erial #:	ione #.				
lodel (circle one):	MTVI-E2- <b>MBK</b>	MTVI-E2- <b>CSB</b>		MTVI-E2- <b>PM</b>	Н
,	i <b>re or Explosion!</b> Failure t	to install fireplace according to th	nese instru	ıctions can lead to	a fire or explosior
appliance Install				IF NO, WHY?	,
	e floor protection (Pg. 8)			11 14O, VVITT	
erified clearance to com	bustible (Pg. 8)		H .		
Init is leveled and secure	∌d				
<u>/enting/Chimney</u> Sec	tion 4 (Pg. 12)				
enting configuration con					
	and secured in place with p	proper clearance	П		
xterior wall/roof flashing			П		
erminations installed an					
OAK installed and sealed	(If needed) (Pg. 18)				
<u>lectrical</u>			_		
20VAC unswitched pow	er provided to the appliance	e (Pg. 21)	□ .		
Appliance Setup Sec	tion 6 (Pg. 18)				
II packaging and protect					
accessories installed pro					
		owers operate as the should			
	responsible for use and op	n inside/under the fireplace	Ш,		
and given to the party	responsible for use and op	Jeration.			
	nologies recommends	_			
	Illation and copying this che				
I hat this checklist rema	in visible at all times on the	e fireplace until the installation is	complete.		
	cription of the issues, who i	is responsible (Installer/Builder/C		•	
	d to party responsible	b (Builder/Gen. Contractor)			

3

# **Dimensions and Clearances**

### A. Appliance Dimensions

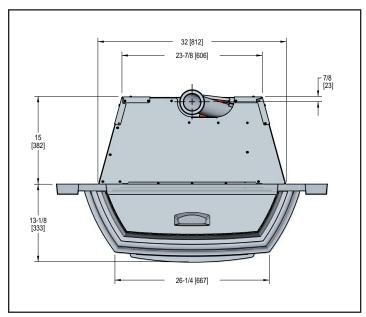


Figure 7.1 - Top View

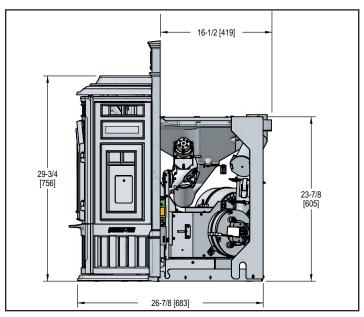


Figure 7.3 - Side View

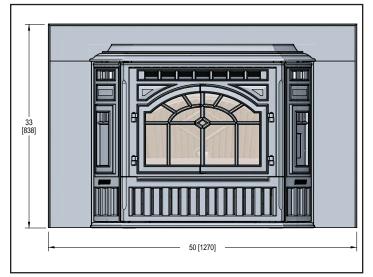


Figure 7.2 - Front View with Basic Surround Panel Set

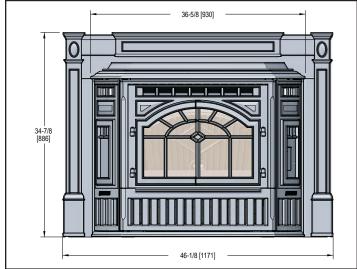


Figure 7.4 - Front View with Cast Panel Set

#### B. Clearance To Combustibles, US & Canada

#### **Built-in Unit - Rear Vent**

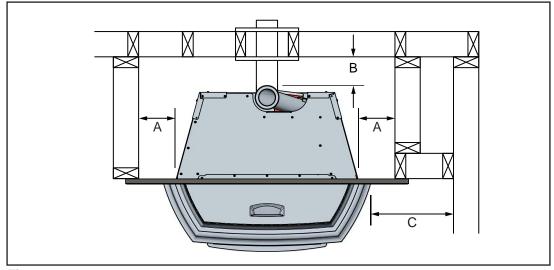


Figure 8.1

	Location Configuration		Inches	Millimeters
Α	Side of Outside Skin	Top or Rear Vent	2	51
В	Vent Pipe to Combustible	Top or Rear Vent	3	76
С	Cast Side to Side Wall	Top or Rear Vent	6	152

#### **Built-in Unit - Rear Vent with Outside Air**

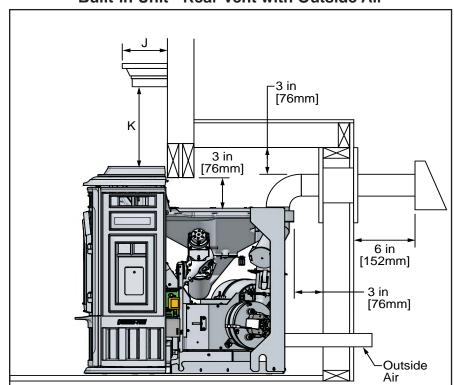


Figure 8.2





Comply with all minimum clearances to combustibles as specified.

Failure to comply may cause house fire.

Note: In Canada where passage through a wall or partition of combustible construction is desired, the installation shall conform to CAN/CSA-B365.

Through the wall, horizontal termination cap must be a minimum of 6" (152mm) from the wall. Approved for mobile home installations. Must use 3" or 4" (76-102mm) "L" or "PL" listed pellet venting or listed double wall pipe and a Quadrafire outside air kit (OAK3) in mobile homes.

#### Note:

- Illustrations reflect typical installations and are <u>FOR DESIGN PURPOSES ONLY</u>.
- · Illustrations/diagrams are not drawn to scale.
- Actual installation may vary due to individual design preference.

#### **Built-In Vertical**

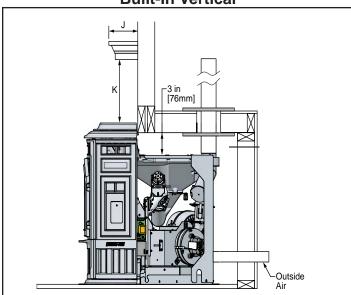


Figure 9.1

The maximum mantel depth (J) is 12 inches (305mm) with a minimum vertical height (K) of 12 inches (305mm).

However if your mantel has a depth of 10 inches (254mm) then the vertical minimum height is 10 inches (254mm).

## C. Masonry & Zero Clearance Fireplaces

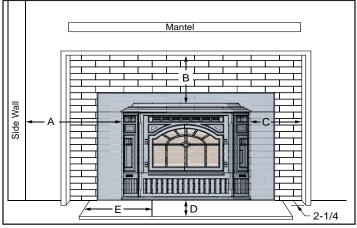


Figure 9.2

	Location		Millimeters
Α	Insert side to combustible side wall	6	152
В	Insert top to max. 2-1/4 inch face trim	0	0
С	Insert side to max. 2-1/4 inch face trim	0	0

<sup>\*\*</sup> Face Trim not to exceed 3/4"

#### **D. Floor Protection**

	Location	Inches	Millimeters
D	Floor protection hearth extension from door opening	6	152
Е	Floor protection to the side of door opening	6	152

- Use a non-combustible floor protector, extending beneath appliance and to the front, and sides as indicated.
- If employing a hearth extension, any parts or materials used in construction must be non-combustible.

# E. Minimum Opening for Masonry & Zero Clearance Fireplaces

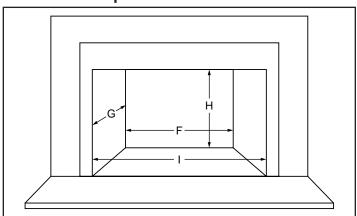


Figure 9.3

	Location	Inches	Millimeters
F	Rear Width	24	610
G	Depth	16-1/2	381
Н	Height	23-7/8	606
Ī	Front Width	34	864

#### F. Installation into a Factory-Built Fireplace

The following modifications are permissible:

- Removal of damper or locked in open position
- · Removal of smoke shelf or baffle
- Removal of ember catches
- · Removel of fire grate
- · Removal of view screen/curtain
- · Removal of doors
- Removal of factory-built fireplace floor
- External trim pieces which do not affect the operation of the fireplace may be removed providing they can be stored on or within the fireplace for reassembly if the insert is removed.
- The permanent metal warning label provided must be attached to the back of the fireplace, with screws or nails, stating that the fireplace may have been altered to accommodate the insert, and must be returned to original condition for use as a conventional fireplace. Figure 10.1

## WARNING

THIS FIREPLACE MAY HAVE BEEN ALTERED

TO ACCOMMODATE AN INSERT. IT MUST BE
RETURNED TO ITS ORIGINAL CONDITION
BEFORE USE AS A SOLID FUEL BURNING
FIREPLACE.

250-206

#### Figure 10.1


- If the hearth extension is lower than the fireplace opening, the portion of the insert extending onto the hearth must be supported.
- Manufacturer designed adjustable support kit can be ordered from your dealer.

NOTE: Refer to chimney liner manufacturer for recommendations on supporting the liner. Installation into fireplaces without a permit will void the listing.

- The firebrick (refractory), glass doors, screen rails, screen mesh and log grates can be removed from a factory-built firebox in order to gain minimum insert opening requirements.
- Any smoke shelves, shields and baffles may be removed from a factory-built firebox <u>if attached with mechanical</u> fasteners.
- The metal floor of the factory-built firebox may be removed to facilitate the installation of the insert only when a 1 inch (25mm) airspace is provided between the insert and the floor of outer wrap.

The following is only one example as there are many different models of factory-built fireplaces.


NOTE: This example is for reference only. Any modifications must not compromise the structural integrity or reduce the protection for combustible materials.

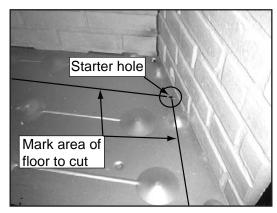

**Figure 10.2.** Measure and mark the metal floor for cutting. With a drill, make a starter hole in each corner.




**Figure 10.3**. Using a saws-all, cut out the floor.

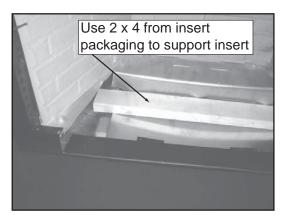


**Figure 10.4**. If the floor is made of thin metal, we recommend using the 2 x 4 from the insert packaging to support the insert. The 2 x 4 may need to be cut to the appropriate size.

#### **Example Removal of Factory-Built Fireplace Cont.**

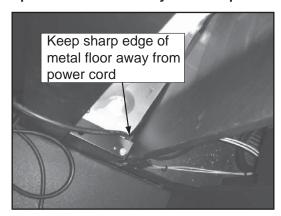

**Figure 11.1.** Place the insert into the factory-built firebox. Ensure that the power cord can not be damaged by the sharp metal edge. You may need to cut out a notch to accommodate the cord.

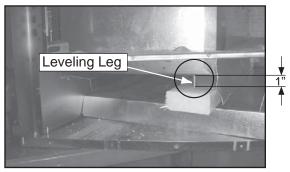

**Figure 11.2.** Ensure that the leveling leg is positioned over the 2 x 4 before leveling the insert. Minimum 1" clearance.

#### G. Installation into a Masonry Fireplace

All modifications that can be made to a Factory Built Fireplace can be made to a Masonry Fireplace.

In addition **DO NOT** remove any brick or mortar from the existing fireplace.

## A

#### **WARNING**

- Removing floor of fireplace must not weaken structure of firebox or reduce protection for combustible materials.
- Final approval of this installation type is contingent upon the appropriate local authority having jurisdiction.

#### H. Prefabricated Metal Chimney

The chimney can be new or existing, masonry or prefabricated and must meet the following minimum requirements:

- Must be minimum 6 inch (152mm) inside diameter of high temperature chimney listed to UL 103 HT (2100°F) or ULC-S628.
- •Must use components required by the manufacturer for installation.
- •Must maintain clearances required by the manufacturer for installation.
- Refer to manufacturers instructions for installation.
- •This insert is listed to ASTM E 1509-12 Standard and is approved for installation into listed factory-built zero clearance fireplaces listed to UL 127 conforming to the following specifications and instructions:
- •The original factory-built clearance fireplace chimney cap must be re-installed after installing the approved chimney liner meeting type UL 103 HT requirements (2100°F) per UL 1777.
- •If the chimney is not listed as meeting HT requirements, or if the factory built fireplace was tested prior to 1998, a full height listed chimney liner must be installed from the appliance flue collar to the chimney top.
- •The liner must be securely attached to the insert flue collar and the chimney top.
- •The air flow of the factory-built zero-clearance fireplace system must not be altered. The flue liner top support attachment must not reduce the air flow for the existing air-cooled chimney system.
- •No dilution air is allowed to enter the chimney.
  - Secure the fireplace damper in the open position. If this cannot be accomplished, it will be necessary to remove the damper
  - 2. Seal damper area of chimney around chimney connector with a high temperature sealant or seal insert against the face of the fireplace.
  - 3. Both methods must be removable and replaceable for cleaning and re-installation.



#### WARNING

# Risk of Fire! Follow venti

Follow venting manufacturer's clearances and instructions when installing venting system.

NOTICE: In Canada when using a factory-built chimney it must be safety listed, Type UL103 HT (2100°F) [1149°C] CLASS "A" or conforming to CAN/ULC-S629M, STANDARD FOR 650°C FACTORY-BUILT CHIMNEYS.



#### **Vent Information**

#### A. Venting Termination Minimum Requirements

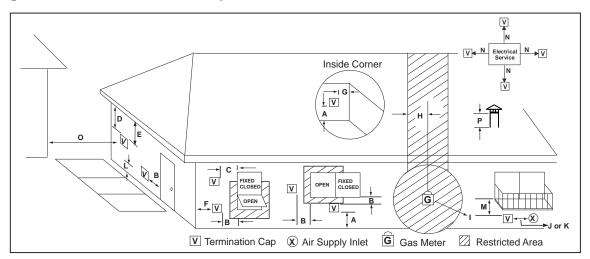


Figure 12.1
All minimum clearances are listed with an Outside Air Kit (OAK) installed, unless otherwise noted in table below.

Α	12 in.	Above Finish Grade (the grade surface must be a non-combustible material
В	12 in. 48 in. no OAK	Open door or window: below or to the side
В	12 in.	Open door or window: above
С	6 in.	Permanently closed window: above, below or to the side
D	18 in. 36 in. no OAK	Vertical clearance to a ventilated soffit located above the terminal within a horizontal distance of 2 ft from the center-line of the terminal
E	12 in.	Clearance to unventilated soffit
F	12 in.	Clearance to outside corner
G	12 in.	Clearance to inside corner
Н	36 in.	Above gas meter/regulator measured from horizontal center-line of regulator
I	36 in. USA 72 in. Canada	Clearance to service regulator vent outlet
J	12 in. 48 in. no OAK	Clearance to non-mechanical air supply inlet to the building or the combustions air inlet to any other appliance
K	10 ft horizontal 3 ft vertical	Clearance to mechanical air supply
L	7 ft.	Above paved sidewalk, paved driveway located on <b>public</b> property
М	12 in.	Under an open veranda, porch, deck or balcony
N	See Note below*	Electric service: above, below or to the side (location must not obstruct or interfere with access)
0	24 in.	Adjacent building, fences and protruding parts of the structure
Р	12 in.	Clearance above roof line for vertical terminations

\*NOTE: Consult local building, fire officials or authorities having jurisdiction. Local codes or regulations may require different clearances.

24 in.	Above grass, top of plants, wood or any other combustible
12 in. 36 in. no OAK	Clearance from any forced air intake of other appliance
12 in.	Clearance horizontally from combustible wall
15 in.	Vented directly through a wall, minimum length of horizontal pipe
6 in. horizontal 12 in. vertical	Minimum horizontal or vertical terminations must protrude from wall

#### **NOTICE:**

#### **Do NOT Terminate Vent:**

- In any location that will allow flue gases or soot from entering or staining the building
- In any location which could create a nuisance or hazard
- In any enclosed or semi-enclosed area such as a carport, garage, attic, crawl space, under a sun deck or porch, narrow walkway
- Closely fenced area, or any location that can build up a concentration of fumes such as a stairwell, covered breezeway, etc.

#### NOTICE:

#### Termination must exhaust above air inlet elevation.

- It is recommended that at least 60 inches (1.52m) of vertical pipe be installed when appliance is vented directly through a wall. This will create a natural draft, which will help prevent the possibility of smoke or odor venting into the home during a power outage.
- It will also keep exhaust from causing a nuisance or hazard by exposing people or shrubs to high temperatures.
- The safest and preferred venting method is to extend the vent vertically through the roof or above the roof.

#### B. Avoiding Smoke and Odors

# Negative Pressure, Shut-Down and Electrical Power Failure

To reduce the probability of back-drafting or burn-back in the pellet appliance during power failure or shut down conditions, it must be able to draft naturally without exhaust blower operation.

Negative pressure in the house will resist this natural draft if not accounted for in the pellet appliance installation.

Heat rises in the house and leaks out at upper levels. This air must be replaced with cold air from outdoors which flows into lower levels of the house.

Vents and chimneys into basements and lower levels of the house can become the conduit for air supply and reverse under these conditions.

#### **Outside Air**

An outside air kit is recommended in all installations and must be ordered separately.

Per national building codes, consideration must be given to combustion air supply to all combustion appliances. Failure to supply adequate combustion air for all appliance demands may lead to backdrafting of those and other appliances.

When the appliance is roof vented (strongly recommended):

The air intake is best located on the exterior wall oriented towards the prevailing wind direction during the heating season.

When the appliance is side-wall vented:

The air intake is best located on the same exterior wall as the exhaust vent outlet and located lower on the wall than the exhaust vent outlet.

The outside air supply kit can supply most of the demands of the pellet appliance, but consideration must be given to the total house demand.

House demand may consume the air needed for the appliance. It may be necessary to add additional ventilation to the space in which the pellet appliance is located.

Consult with your local HVAC professional to determine the ventilation demands for your house.

#### CAUTION

- DO NOT CONNECT THIS UNIT TO A CHIMNEY FLUE SERVICING ANOTHER APPLIANCE.
- DO NOT CONNECT TO ANY AIR DISTRIBUTION DUCT OR SYSTEM.

#### **Vent Configurations**

To reduce probability of reverse drafting during shut-down conditions Hearth & Home Technologies strongly recommends:

- Installing the pellet vent with a minimum vertical run of 5 feet (1.52m). Preferably terminating above the roof line.
- Installing the outside air kit at least 4 feet (1.22m) below the vent termination.

To prevent soot damage to exterior walls of the house and to prevent re-entry of soot or ash into the house:

- Maintain specified clearances to windows, doors and air inlets, including air conditioners.
- Vents should not be placed below ventilated soffits.
   Run the vent above the roof.
- · Avoid venting into alcove locations.
- Vents should not terminate under overhangs, decks or onto covered porches.
- Maintain minimum clearance of 12 inches (305mm) from the vent termination to the exterior wall. If you see deposits developing on the wall, you may need to extend this distance to accommodate your installation conditions.

#### C. Negative Pressure



#### **WARNING**

#### Risk of Asphyxiation!

Negative pressure can cause spillage of combustion fumes and soot.

Negative pressure results from the imbalance of air available for the appliance to operate properly. It can be strongest in lower levels of the house.

#### Causes include:

- Exhaust fans (kitchen, bath, etc.)
- Range hoods
- Combustion air requirements for furnaces, water heaters and other combustion appliances
- Clothes dryers
- Location of return-air vents to furnace or air conditioning
- Imbalances of the HVAC air handling system
- Upper level air leaks such as:
  - Recessed lighting
  - Attic hatch
  - Duct leaks

To minimize the effects of negative air pressure:

- Install the outside air kit with the intake facing prevailing winds during the heating season
- Ensure adequate outdoor air for <u>all</u> combustion appliances and exhaust equipment
- Ensure furnace and air conditioning return vents are not located in the immediate vicinity of the appliance
- Avoid installing the appliance near doors, walkways or small isolated spaces
- Recessed lighting should be a "sealed can" design
- Attic hatches weather stripped or sealed
- Attic mounted duct work and air handler joints and seams taped or sealed

#### D. Draft

Draft is the pressure difference needed to vent an appliance successfully. When an appliance is drafting successfully, all combustion byproducts are exiting the home through the chimney.

Install through the warm airspace enclosed by the building envelope. This helps to produce more draft, especially during lighting and die-down of the fire.

Considerations for successful draft include:

- · Preventing negative pressure
- Location of appliance and chimney

**NOTICE:** Hearth & Home Technologies assumes no responsibility for the improper performance of the chimney system caused by:

- Inadequate draft due to environmental conditions
- Downdrafts
- Tight sealing construction of the structure
- Mechanical exhausting devices

#### E. Chimney and Exhaust Connection

 <u>Chimney & Connector</u>: Use 3 or 4 inch (76-102mm) diameter type "L" or "PL" venting system. It can be vented vertically or horizontally.

**NOTE**: The appliance exhaust outlet is designed to accommodate 3 inch venting. Use of 4 inch venting requires the use of a 3-to-4 inch exhaust vent increaser in addition to any other venting components needed, sold separately.

- Mobile Home: Approved for all Listed pellet vent. If using the 3 to 6 inch (76-152mm) Top Vent Offset Adapter, use Listed double wall flue connector. A Quadra-Fire Outside Air Kit (OAK-3) must be used with manufactured home installations.
- 3. <u>Residential:</u> The 3 inch (76mm) vertical Top Vent Adapter Kit and the 3 to 6 inch (76-152mm) Top Vent Offset Adapter are tested to use 24 gauge single wall flue connector or Listed double wall flue connector to Class A Listed metal chimneys, or masonry chimneys meeting International Residential Code standards for solid fuel appliances.
- 4. INSTALL VENT AT CLEARANCES SPECIFIED BY THE VENT MANUFACTURER.
- 5. Vent Assembly to Insert Instructions:

These instructions are for connecting the vent pipe to the vent assembly prior to installing the appliance in the fireplace.

- a. Unlatch the vent assembly for the exhaust blower and attach to the vent pipe end using high temperature silicone and at least three screws.
- b. Slide the appliance into place and line up the bent assembly with the exhaust blower.
- c. Make sure the high-temperature gasket is in place.
- d. Latch the top vent assembly to the exhaust blower.
- 6. DO NOT INSTALL A FLUE DAMPER IN THE EXHAUST VENT-ING SYSTEM OF THIS UNIT.
- 7. DO NOT CONNECT THIS UNIT TO A CHIMNEY FLUE SERVING ANOTHER APPLIANCE.
- Disconnect the vent pipe from the appliance to allow removal of the fireplace insert for the purpose of inspecting the fireplace insert and the fireplace.

NOTE: All pipe must be welded seam pipe whenever possible. Seal pipe joints with high temperature silicone (500°F [260°C] minimum rated only).



#### WARNING

USE ONLY RECOMMENDED VENTING COMPONENTS; OTHERWISE MAKESHIFT PARTS MAY RESULT IN PROP-ERTY DAMAGE, PERSONAL INJURY, OR DEATH.

#### F. Equivalent Feet of Pipe


The table below can help you calculate the equivalent feet of pipe which is a method used to determine pellet vent size. **Figure 15.1.** 

## **A** WARNING



Vent surfaces get HOT, can cause burns if touched. Non-combustible shielding or guards may be required.

## **Example of 3 Elbow-Rear Vent Termination Calculation**

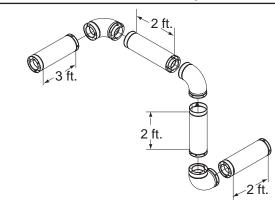

Pellet Venting Component	# of Elbows	Feet of Pipe	Multiplied By	Equivalent Feet	Components Equivalent Feet
90° Elbow or Tee	3		Х	5	15
45 <sup>o</sup> Elbow			Х	3	
Horizontal Pipe		7	Х	1	7
Vertical Pipe		2	Х	0.5	1
			Total Eq	uivalent Feet	23

Note: This is a generic example and is not intended to represent any specific fuel type.

Figure 15.1

#### G. Pipe Selection Chart

The chart will help you in determining proper venting size according to the equivalent feet of pipe calculated previously and the altitude above sea level of this installation.

#### Figure 15.2

- a. Locate the calculated equivalent feet of pipe on the vertical left side of the chart.
- b. Move to the right horizontally on the chart until you reach your altitude above sea level.
- c. If you fall below the diagonal line, 3 or 4 inch (76 to 102mm) pipe may be used.
- d. If it is anywhere above the diagonal line, a 4 inch (102mm) diameter pipe is required.

#### **NOTICE:**

- A 90° elbow is 5 times as restrictive to the flow of exhaust gases under positive pressure as 1 foot (305mm) of horizontal pipe.
- A foot of horizontal pipe is twice as restrictive as a foot of vertical pipe.

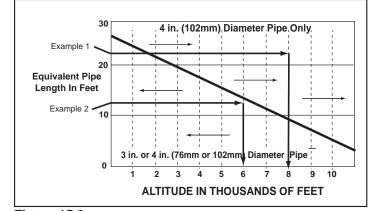


Figure 15.2

**Example 1**: If the equivalent length of pipe is 23 feet (7m) with altitude of 8,000 feet (2438m) you must use 4 inch (102mm) diameter type "L" or "PL" vent.

**Example 2**: If the equivalent length of pipe is 12 feet (3.7m) with altitude of 6,000 feet (1829m) you may use 3 or 4 inch (76 to 102mm) diameter type "L" or "PL" vent.

#### **WARNING**

# Risk of Fire! Only LISTE NO OTHER

- Only LISTED venting components may be used.
- NO OTHER vent components may be used.
- Substitute or damaged vent components may impair safe operation.

## 🛕 v

#### **WARNING**

#### RISK OF INJURY OR PROPERTY DAMAGE!

- Improper installation, adjustment, alteration, service or maintenance can cause injury or property damage.
- Refer to the owner's information manual provided with this appliance.
- For assistance or additional information consult a qualified installer, service agency or your dealer.

## **Venting Systems**

#### A. Full Reline With Outside Air - Horizontal

#### **CAUTION**

Never draw outside combustion air from:

- Wall, floor or ceiling cavity
- Enclosed space such as an attic or garage



#### **WARNING**

#### Fire Risk.

Inspection of Chimney:

- Masonry chimney must be in good condition.
- Meets minimum standard of NFPA 211
- Factory-built chimney must be a minimum 6 inch (152mm) UL103 HT.

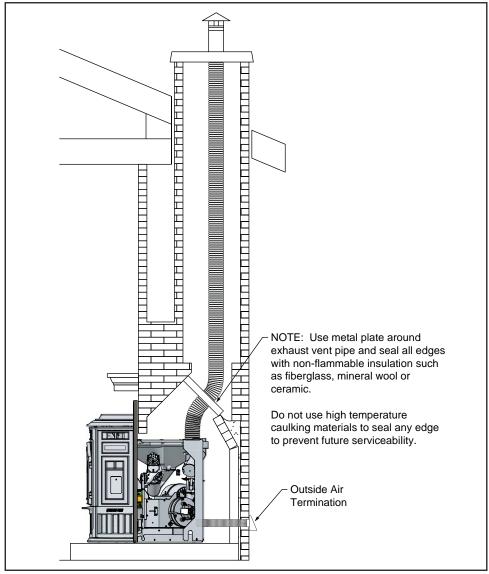


Figure 16.1

#### NOTE:

In Canada, where passage through a wall or partition of combustible construction is desired, the installation shall conform to CAN/CSA-B365.

#### NOTE:

- Illustrations reflect typical installations and are <u>FOR</u> <u>DESIGN PURPOSES ONLY</u>.
- Illustrations/diagrams are not drawn to scale.
- Actual installation may vary due to individual design preference.

#### B. Full Reline With Outside Air - Vertical

**NOTE:** Check clearances carefully for this type of installation to ensure adequate room for outside air venting.

**NOTE:** In Canada only a full reline is allowed per ULC S628, ORD ULC C1482-M1990.

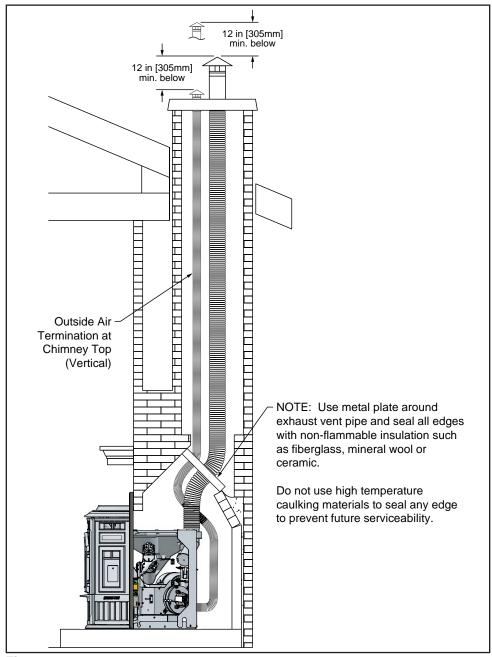


Figure 17.1

**NOTE:** In Canada this fireplace insert must be installed with a continuous chimney liner extending from the fireplace insert to the top of the chimney. The chimney liner must conform to the Class 3 requirements of CAN/ULC-S635, Standard for Lining Systems for Existing Masonry or Factory-Built Chimneys and Vents, or CAN/ULC-S640, Standard for Lining Systems for New Masonry Chimneys.

#### **CAUTION**

Check building codes prior to installation.

- Installation MUST comply with local, regional, state and national codes and regulations.
- Consult local building, fire officials or authorities having jurisdiction about restrictions, installation inspection, and permits.



## **Appliance Set-Up**

#### A. Leveling System

The leveling bolts are located on the sides of the appliance, front and rear. To access the bolts, remove the front access panels. Reach in and turn the bolt to the desired height to level the appliance. **Figure 18.1** 

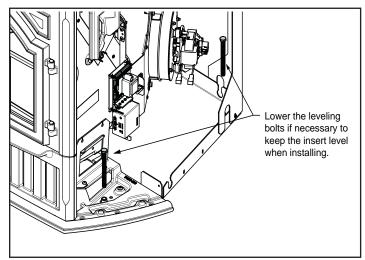


Figure 18.1

#### **B. Outside Air Kit Instructions**

**Included in Kit**: 2 wire ties, 1 collar assembly, 1 termination cap assembly, 1 trim ring, fasteners.

#### 3 INCH (76mm) ALUMINUM FLEX PIPE NOT INCLUDED

**Tools Needed:** Phillips head screw driver; wire cutters; hole saw or jig saw.

- 1. Measure distance from floor to air vent opening in appliance and mark location on wall.
- 2. Use saw to cut opening in wall. Cut a 3-1/2 to 4 inch (89-102mm) opening on inside wall and a 4 to 4-1/2 inch (102-114mm) opening on outside of house.
- 3. Use wire ties to secure flex pipe to collar assembly.
- 4. Slide trim ring over flex pipe and run pipe through wall.
- 5. Attach flex pipe (not included) to outside termination cap with second wire tie.
- 6. Secure termination cap to outside surface.
- 7. Secure trim ring to interior wall.

#### **CAUTION**

Never draw outside combustion air from:

- · Wall, floor or ceiling cavity
- · Enclosed space such as an attic or garage

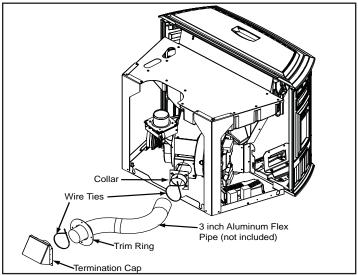



Figure 18.2 - OAK Exploded View

#### C. Hearth Support

**Included in Kit:** (1) bottom, (1) trim front, (2) trim sides, (2) trim extensions

**Tools Needed:** Phillips head screw driver, measuring tape, gloves

- **1.** Remove contents from box and lay on protective surface to avoid scratching the paint.
- 2. Lay front and sides face down. Bend the tabs down toward the inside. **Figure 18.3**
- **3.** The side pieces are shipped flat. It is must easier to flex the sides into a bowed position before installing.
- **4.** Lay the cast bottom face up. Attach the 2 sides FIRST and then the front piece. **Figure 19.1 on pg. 19**
- **5**. Turn the cast bottom right side up and attach the panel extensions. Note the alignment hole.
- **6.** Attach the appropriate footers depending on the panels & trim set you are installing. The footers come in 2 sizes, 3 and 5 inches. Discard the footers not used.
- Place the assembled hearth support under the insert. Lower the leveling bolts if necessary to keep the insert level.
- 8. Open the door and attach the hearth support to the insert. There are 9 attachment holes. Figure 19.2 on pg. 19

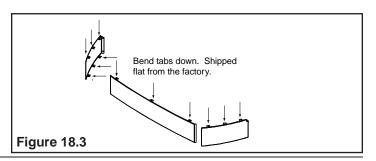

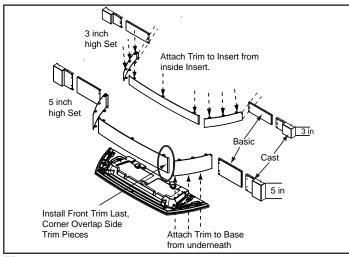


Figure 19.1

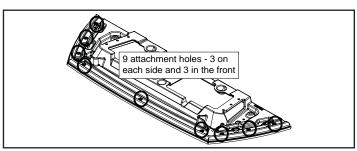


Figure 19.2

#### D. Removal of Cast Sides

Remove the right side panel by releasing the upper, springloaded latch. Access the latch through the upper panel vent holes. The cast panel should fall forward. Lift it out of its lower nest and set the panel aside. You may need to disconnect the dial control wire harness.

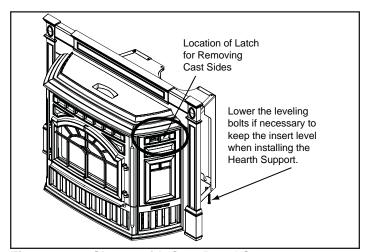


Figure 19.3 - Shown with Cast Panel Set

#### E. Surround and Trim Set - Cast

**Included in Surround Kit:** (2) side panels, left and right; (1) panel top; (1) fastener package.

**Included in Cast Trim Kit:** (2) cast trim legs, left and right; (1) cast trim header; (2) cast trim footers, left and right; (1) fastener package.

Tools Needed: Powered Phillips head screw driver

- 1. Remove contents from box being careful not to scratch or damage the cast trim pieces.
- 2. Lay the surround set face down on protective covering to prevent scratching the painted surface.
- 3. Secure the surround legs to top panel with the screws provided.
- Now bend the tabs down toward the backside of the panel set, 5 on top and 2 on each leg. Leave the panel set face down. Figure 19.4
- 5. Place the corresponding cast trim pieces (2 cast trim legs and 1 cast trim header) underneath the panel set, also face down.
- 6. Place washer provided over tab and secure the trim and panel together with screw. Continue for all tabs.
- 7. Secure cast footers with screws.
- 8. Remove both left and right cast sides from insert. **See Figure 19.3.**
- Carefully slide surround and trim over the top of the insert into place matching the mounting holes on the panel with the mounting holes on the insert. Secure with screws provided.

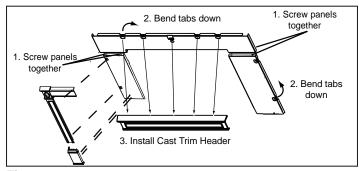


Figure 19.4

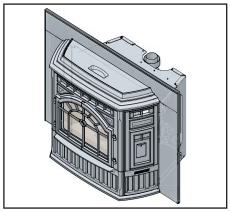


Figure 19.5- Completed View

#### F. Surround & Trim Set, Basic

**Included in Surround & Trim Kit:** (2) corner brackets and set screws; (1) trim set, 3 piece; (2) side panels; (1) top panel; (4) screws.

Tools Needed: Powered Phillips head screw driver

- Secure the top panel to the surround sides with the screws provided. Figure 20.1
- 2. Assemble the trim with the (2) corner brackets provided. Figure 20.2
- 3. Remove the 2 cast sides and slide the assembled trim over the assembled surround set. Figure 19.3 on pg 19
- Carefully slide surround and trim over the top of the insert into place matching the mounting holes on the panel with the mounting holes on the insert. Secure with screws provided. Figure 20.3

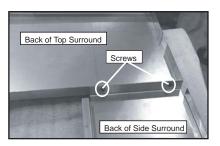


Figure 20.1

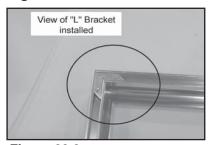


Figure 20.2

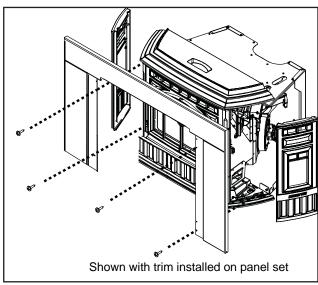


Figure 20.3

# G. Optional Log Set Placement Instructions 2 PIECE LOG SET INSTALLATION

- 1. Place the left log as shown. There are 2 indentations in the bottom of the log to fit over the screw heads in the firebox. **Figures 20.4 & 20.5**
- 2. Place the right log in front of the 2 screw heads in the firebox. Figures 20.6 & 20.7

#### **CAUTION**

Logs are FRAGILE. Use extreme care when handling or cleaning logs.

#### NOTICE:

Due to the abrasive nature of a pellet appliance fire, the logs are not covered under warranty. Any placement variation other than shown here can cause excessive heat and shall void the appliance warranty.

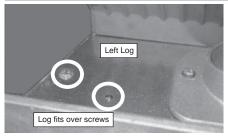


Figure 20.4



Figure 20.5

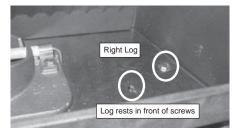


Figure 20.6



Figure 20.7

#### H. Programmable Wall Thermostat Installation

The appliance comes standard with a wall thermostat and 25' of wire. If you need to run more than 25' make sure you use a continuous strand of 18 to 22 gauge thermostat wire. For optimum performance your thermostat should be located on an inside wall approximately 5' up from the floor.

# How to Install Your Programmable Wall Thermostat

- Separate the body of the thermostat from the mounting plate by gently pulling the two pieces apart
- Connect your thermostat wire to the W and R terminals (see figure below)
- Screw the backer plate to the wall using the hardware included
- 4. Snap the thermostat to the backer plate
- Connect the wires to the 2 center screws on the terminal block on the back of the product

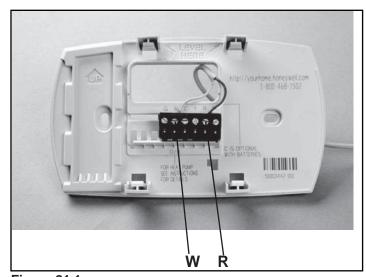


Figure 21.1


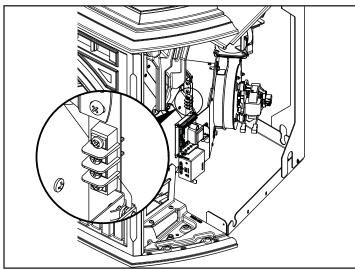


Figure 21.2

#### **Programming Thermostat**

The thermostat maintains a desired room temperature. The 5-2 day programmable function allows one program for week days and a separate program for Saturday/Sunday. (Up to 4 periods per day).

#### **Thermostat Controls**

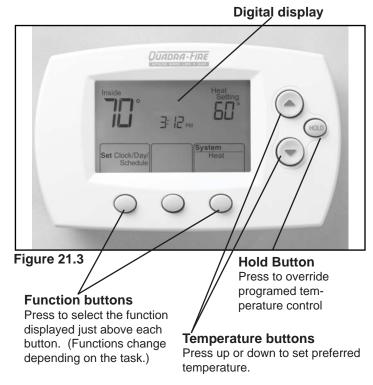

Saturday and Sunday can be programmed individually by changing the format from 5-2 to 5-1-1. To change the format:

- 1. Press and hold the up button and the center button until the display changes.
- 2. Press up or down to change system function number to 16.
- 3. Press **NEXT** to advance to next function.
- 4. Press up or down to change status number to 1.
- 5. Press **DONE** to exit and save settings.

#### **Program Schedule**

Pre-set settings are shown below.

You can program 4 time periods each day, with different settings for weekdays and weekends.

Wake- Set to time and temperature you want in the morning until you leave for the day. Leave- Set the time and temperature you want the heat out-

put reduced to during the day. Return- Set the time and temperature to what you want the heat output increased to in the evening.

Sleep - Set the time and temperature to what you want for overnight.

_	Heat	
<b>Wake</b> (6:00 am)	70°	
Leave (8:00 am)	62°	
Return (6:00 pm)	70°	
Sleep 10:00 pm)	62°	

#### **To Adjust Program Schedules**

- 1. Press SET CLOCK/DAY/SCHEDULE, then SET SCHEDULE.
- 2. Press ▲ / ▼ to set your weekday wake time (Mon-Fri), then press **NEXT.**
- 3. Press  $\blacktriangle/\blacktriangledown$  to set the temperature for this time period, then press NEXT.
- 4. Set time and temperature for the next time period (Leave). Repeat steps 2 and 3 for each weekday time period.
- 5. Press **NEXT** to set weekend time periods (Sat-Sun), then press DONE to save & exit.

NOTE: You can press CANCEL PERIOD to eliminate unwanted time periods (except Wake).

#### Program Schedule Override (temporary)

Press ▲ or ▼ to immediately adjust the temperature. This will temporarily override the temperature setting for the current time period.

The new temperature will be maintained only until the next programmed time period begins. For example, if you want to turn up the heat early in the morning, it will automatically be lowered later, when you leave for the day.

To cancel the temporary setting at any time, press RUN SCHEDULE.

#### **Program Schedule Override (permanent)**

Press HOLD to permanently adjust the temperature. This will override the temperature settings for all time periods. The "Hold" feature turns off the program schedule and allows you to adjust the thermostat manually, as needed. Whatever temperature you set will be maintained 24 hours a day, until you manually change it, or press RUN SCHED-ULE to cancel "Hold" and resume the prgrammed schedule.

#### **Battery Installation and Replacement**

NOTE: 2 AA batteries are included with the thermostat and must be installed before the appliance can be operated.



Figure 22.1

Install fresh batteries immediately when the REPLACE BATTERY warning begins flashing. The warning flashes about two months before the batteries are depleted.

Even if the warning does not appear, you should replace batteries once a year.

If batteries are inserted within two minutes, the time and day will not have to be reset. All other settings are permanently stored in memory.

#### I. Power Cord

- 1. Prior to installing the power cord, turn the dial control "OFF".
- 2. Make sure the wall receptacle has 120vac output. NOTE: Using a circuit protector can protect the appliance circuits from power surges.
- 3. Remove the right side panel by releasing the upper, spring-loaded latch. Access the latch through the upper panel vent holes. The cast panel should fall forward. Lift it out of its lower nest and set the panel aside. You may need to disconnect the dial control wire harness.
- 4. Connect the power cord to the appliance first.
- 5. Route cord behind panel set.

#### A CAUTION



#### **Shock Hazard**

- Do not remove grounding prong from plug
- Plug directly into properly grounded & prong receptacle.
- Route cord away from appliance
- Do not route cord under or in front of appliance

#### J. Trim Adjustment (Factory default setting is -2)

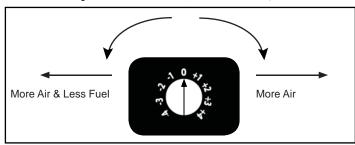


Figure 23.1

The small dial located below the main dial control is used to adjust the amount of fuel and combustion air used for efficient clean burning. Adjusting the trim along with proper cleaning of the firepot and heat exchanger will help achieve maximum performance of your Mt Vernon E2 Appliance. Your appliance may need to be adjusted based on any or all of the following:

- Elevation (3000 feet above Sea Level or Higher)
- Venting/Installation Configurations (installations with greater than 4' horizontal or more than two 90 degree elbows)
- Fuel Quality (lower BTU fuels or fuels with high ash content)
- Fuel Type (hardwood, softwood, lower BTU fuels)
- · Appliances not properly adjusted will:
- · Require more frequent cleanings
- Result in nuisance shut downs and/or missed ignitions
- Waste fuel

Consult your QuadraFire Dealer with specific questions regarding proper adjustments for maximum performance.

#### Where to Start:

#### If Burning Hardwood Pellet Fuel

QuadraFire recommends setting the appliance at a -4 trim setting as a start. From our testing, hardwood fuels burn well between -4 and -2 settings.

# If Burning Lower BTU Pellet Fuel, Utility Pellet Fuel, or High Ash Pellet Fuel

QuadraFire recommends setting the appliance and leaving at a -4 trim setting. From our testing, lower BTU fuels result in large clinkers in the bottom of the firepot during normal operation. Using this type of fuel will increase the recommended firepot cleaning interval.

#### If Burning Softwood Pellet Fuel

QuadraFire recommends starting at a -2 trim setting and adjusting based on installation configurations. From our testing, softwood fuels burn well at a variety of settings.

#### If Elevation is 3000 feet above Sea Level or Higher

When burning at higher elevations you will need more air for the fire to burn properly. QuadraFire recommends starting with a Trim Setting of -3. From our testing, appliances at higher elevations burn best at settings -4,-3, +3, and +4. Review fuel types and installation configurations for choosing the right setting.

# If appliance has long horizontal venting sections or more than two 90 degree Elbows

QuadraFire recommends starting at a -4 trim setting and making adjustments based on fuel type and elevation. From our testing, we have found that -4,-3, +3, or +4 have worked well depending on fuels.

Indicators that Trim Adjustment is needed:

- 1. The flame appears lazy
- 2. Smoke can be seen in the firebox after start up during normal burn
- 3. Excessive build up of clinkers taller than a 1/2" in the bottom of the firepot
- 4. The fire goes out when in normal operating mode

7

#### **Mobile Home Installation**

# You must use a Quadra-Fire Outside Air Kit for installation in a mobile home.

- An outside air inlet must be provided for the combustion air and must remain clear of leaves, debris, ice and/or snow. It must be unrestricted while the appliance is in use to prevent room air starvation which causes smoke spillage. Smoke spillage can also set off smoke alarms.
- The combustion air duct system must be made of metal. It
  must permit zero clearance to combustible construction and
  prevent material from dropping into the inlet or into the area
  beneath the dwelling and contain a rodent screen.
- 3. The appliance must be secured to the mobile home structure by bolting it to the floor (using lag bolts). Use the same holes that secured the appliance to the shipping pallet.
- The appliance must be grounded with #8 solid copper grounding wire or equivalent, terminated at each end with an NEC approved grounding device.
- Refer to Clearances to Combustibles and floor protection requirements on page 8 for listings to combustibles and appropriate chimney systems.
- Use silicone to create an effective vapor barrier at the location where the chimney or other component penetrates to the exterior of the structure.
- 7. Follow the chimney manufacturer's instructions when installing the vent system for use in a mobile home.
- 8. Installation shall be in accordance with the Manufacturers Home & Safety Standard (HUD) CFR 3280, Part 24.

Part Number: OAK-3

#### **CAUTION**

THE STRUCTURAL INTEGRITY OF THE MOBILE HOME FLOOR, WALL AND CEILING/ROOF MUST BE MAINTAINED DO NOT cut through:

- Floor joist, wall, studs or ceiling trusses.
- Any supporting material that would affect the structural integrity.

This unit is to be connected to a factory-built chimney conforming to CAN/ULC-S629, Standard for 650°C Factory-Built Chimneys.

For removal of the chimney for mobile home transportation, contact the proper transportation officials.

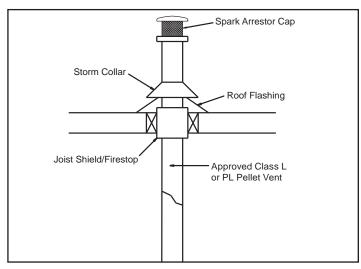


Figure 24.1

#### **CAUTION**

Never draw outside combustion air from:

- · Wall, floor or ceiling cavity
- · Enclosed space such as an attic or garage

#### **WARNING**

It is critical to have a working smoke detector installed in the home of unit operation.

 Smoke alarms that are properly installed and maintained play a vital role in reducing fire deaths and injuries. Having a working smoke alarm reduces the chance of fire related injuries..

#### **WARNING**

Products of combustion generate carbon monoxide and different fuels generate different levels. Carbon monoxide

- Only use approved fuels in this appliance.
- Always keep door shut during operation. Operating this unit with doors open can allow CO to leak into the home.

CO can kill you before you are aware it is in your home. At lower levels of exposure, CO causes mild effects that are often mistaken for the flu. These symptoms include headaches, dizziness, disorientation, nausea and fatigue. The effects of CO exposure can vary greatly from person to person depending on age, overall health and the concentration and length of exposure.



NEVER INSTALL IN A SLEEPING ROOM.

# **Accessory List**



## **MT VERNON INSERT-E2**

Beginning Manufacturing Date: Dec 2014 Ending Manufacturing Date: Active

IMPORTANT: THIS IS DATED INFORMATION. Parts must be ordered from a dealer or distributor. **Hearth and Home Technologies does not sell directly to consumers**. Provide model number and serial number when requesting service parts from your dealer or distributor.



Stocked at Depot

ITEM	DESCRIPTION	COMMENTS	PART NUMBER	at Depot
	Access			<u> </u>
	Adjustable Hearth Support		ADJSPT-12	Υ
	Damper, 3 Inch - Tall Vertical Installs Only		PEL-DAMP3	Υ
	Damper, 4 Inch - Tall Vertical Installs Only		PEL-DAMP4	
	Firescreen		SCR-7005	
	Hearth Support		ZCSPT-MVI	
	Log Set (2 Pc)	Sold as set only	LOGS-60-AE-B	Υ
	Outside Air Kit		OAK-3	
	Top Vent Adapter		TPVNT-3	
	Vent Adapter, 3-4"		811-0720	
	Vent Adapter, 90, cleanout		TPVNT-6	
	Vent Adapter, Cleanout		811-0620	
	Surround, Std, Panel, For Cast Trim		SP-MTVS-CST	
	Component Pack		7036-041	
	Surround, Std, Panel, w/Gold Trim		SP-MTVS-GD	
	Component Pack		7036-042	
	Trim, Panel Set, Gold		250-4660	
	Surround, Std, Panel w/Nickel Black Trim		SP-MTVS-NB	
	Component Pack		7036-042	
	Trim Set, Black Nickel		7019-027	
	,	Matte Black	811-0930	
	Trim Cast	Sienna Bronze	TR-CAST-CSB	
		Mahogany	811-0960	
		Matte Black	414-7090MBK	
	Footer, Left	Sienna Bronze	414-7090CSB	
	,	Mahogany	414-7090PMH	
		Matte Black	414-7100MBK	
	Footer, Right	Sienna Bronze	414-7100CSB	
	. 55.5.,	Mahogany	414-7100PMH	
		Matte Black	414-7110MBK	
	Header	Sienna Bronze	414-7110CSB	
		Mahogany	414-7110PMH	
		Matte Black	414-7120MBK	
	Trim Leg, Left	Sienna Bronze	414-7120CSB	
		Mahogany	414-7120PMH	
	Trim Leg, Right	Matte Black	414-7130MBK	
		Sienna Bronze	414-7130CSB	
		Mahogany	414-7130PMH	



#### **CONTACT INFORMATION**

Hearth & Home Technologies 1445 North Highway Colville, WA 99114 Division of HNI INDUSTRIES

Please contact your Quadra-Fire dealer with any questions or concerns. For the number of your nearest Quadra-Fire dealer log onto www.quadrafire.com

#### **CAUTION**

DO NOT DISCARD THIS MANUAL



maintenance instructions included.

- follow these instructions for safe installation and operation.
- Important operating and Read, understand and Leave this manual with party responsible for use and operation.

# We recommend that you record the following pertinent information for your heating appliance.

Date purchased/installed:	
Serial Number:	Location on appliance:
Dealership purchased from:	Dealer phone:
Notes:	

This product may be covered by one or more of the following patents: (United States) 5341794, 5263471, 6688302, 7216645, 7047962 or other U.S. and foreign patents pending.

